


Serv-Ware SGR Series 5-26-20

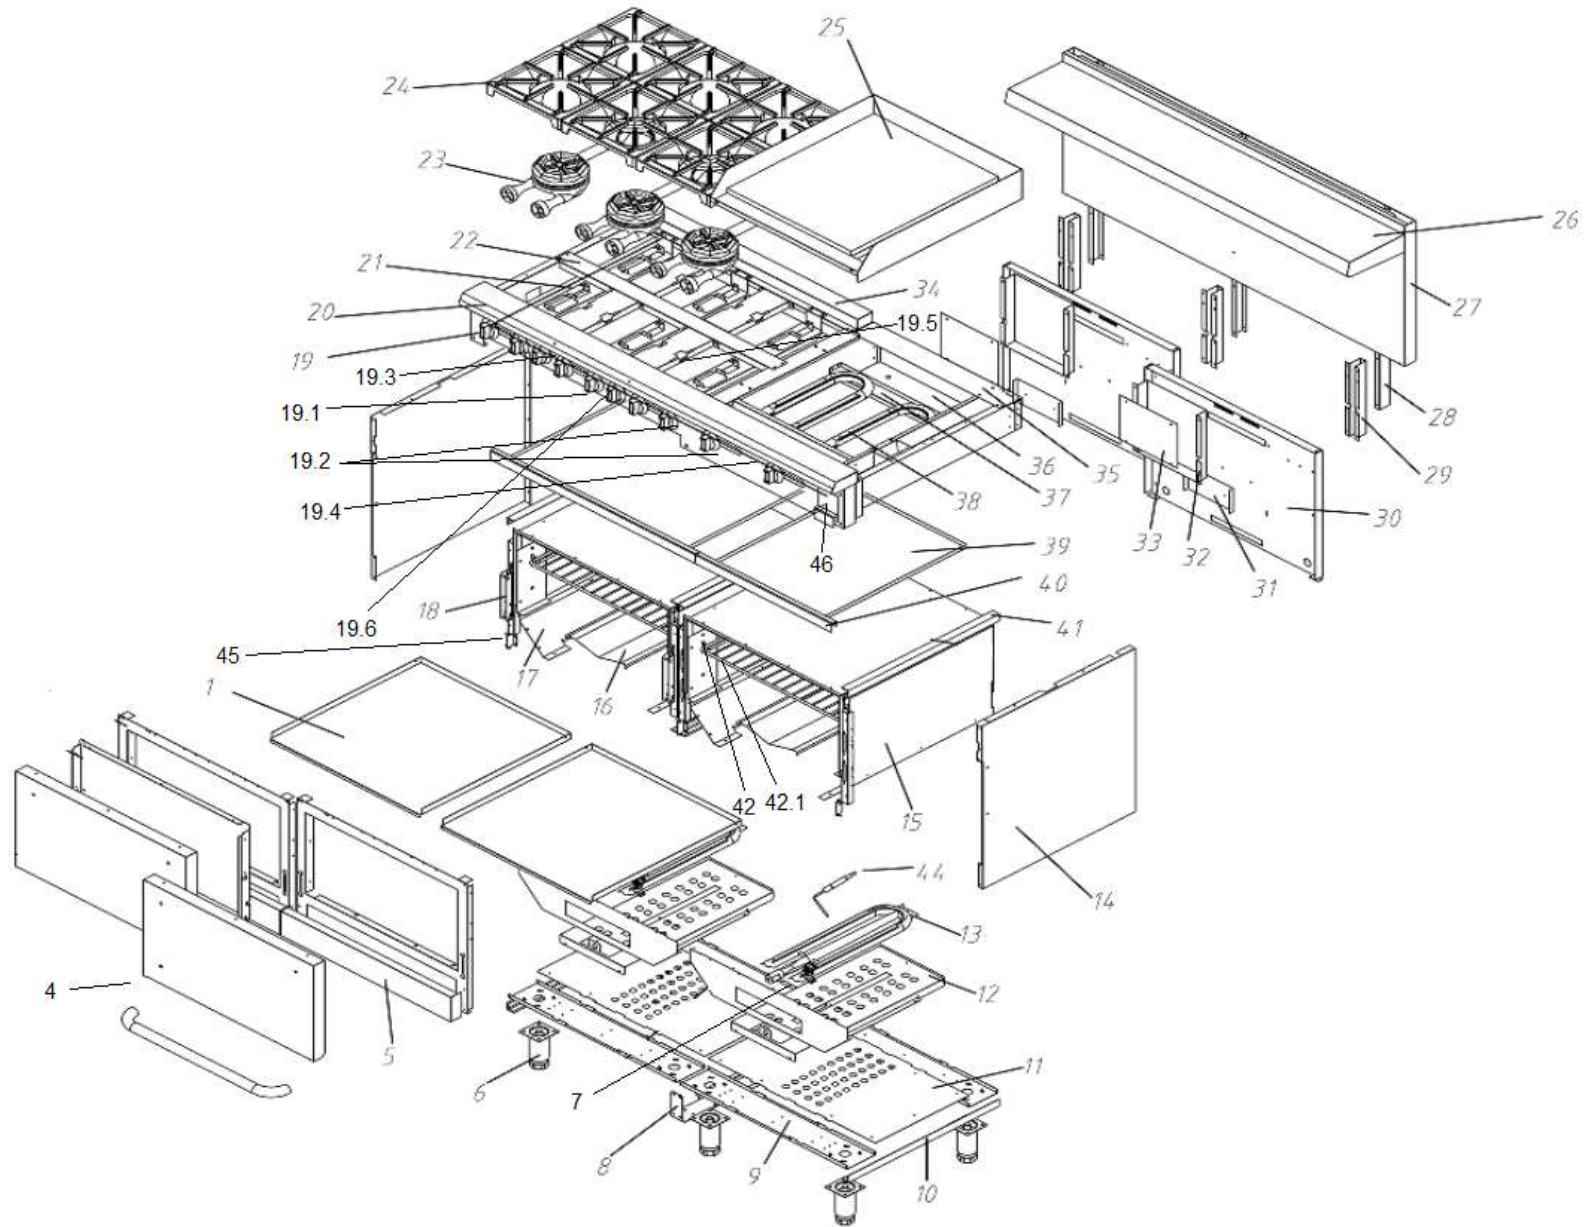

Serv-Ware Products

Ref #	Serv-Ware #	Description	Qty
1	-	Oven bottom plate	1
4	911-801021039006	Door Assembly SGR-4B	1
4.1	911-801021041006	Door Assembly SGR-6B	1
4.2	911-801021041006	Door Assembly SGR-10B/SGR-6B-24G	2
x4Rx	911-70201904282	RH Hinge for Door	1
x4Lx	911-7021904300	LH Hinge for Door	1
5	911-802021039025	Kick Plate SGR-4B	1
5.1	911-802021041057	Kick Plate SGR-6B	1
5.2	911-802021041057	Kick Plate SGR-10B	2
6	CE2421	Leg SGR-4B	4
6.1	CE2421	Leg SGR-6B	4
6.2	CE2421	Leg SGR-10B	6
7	CE2422	Oven Pilot (NG)	1 per NG oven
7.1	CE2422-LP	Oven Pilot (LP)	1 per LP oven
8	-	Connecting plate	1
9	-	Leg support	2
10	-	Reinforcement strip	1
11	-	Housing bottom plate	1
12	-	Burner support plate	1
13	CE2423	Oven burner	1 per oven
14	-	sides plate	2
15	-	Chamber sides	2
16	-	V baffle plate	1 per oven
17	-	sides plate support	2
18	911-70201904291	HINGE RECEIVER FOR RANGE CABINET	2 per oven
19	CE1112	Knob for burner	1 per burner
19.1	CE2416	Knob for oven	1 per oven
19.2	CE2424	Manual Burner/Griddle Valve	1 per burner
19.3	CE2403	Pilot valve(open burner),dual AP6	1 per 2 burners
19.4	CE2402	Pilot valve(griddle), single AP7	1 per griddle burner
19.5	CE2407	Pilot	1 per burner
19.6	CE2425	Thermostat valve for oven	1 per burner
20	-	Bullnose plate	1
21	-	Open burner bracket	-

Serv-Ware Products

Ref #	Serv-Ware #	Description	Qty
22	-	Middle beam between burners	-
23	911-70202500291	Front burner assembly	-
23.1	911-70202500282	Rear burner assembly	-
24	911-70202501328	Grate	1 per burner
25	-	Griddle plate assembly	1
26	911-801021039004	SGR-4B BACKSPLASH & OVERSHELF ASSY	1
26.1	911-801021041004	SGR-6B BACKSPLASH & OVERSHELF ASSY	1
26.2	911-801021047004	SGR-10B BACKSPLASH & OVERSHELF ASSY	1
27	-	Over Shelf plate	1
28	911-802021041015	Over Shelf Support	2 SGR-4B, SGR-6B (3 SGR-10B)
29	-	Over Shelf Support Bracket	1
30	-	Oven rear plate	1
31	-	Oven rear plate support	1
32	-	Chimney outside plate	1
33	-	Chimney inside plate	1
34	-	Rear top plate	1
35	-	Back cross upper beam	1
36	-	Griddle bottom plate	1
37	-	Griddle Burner support plate	1
38	CE2429	Griddle burner	-
39.1	911-801021045005	CRUMB TRAY SGR 12" FRONT	1
39.2	911-801021039005	CRUMB TRAY SGR 24" FRONT	1
39.3	911-801021041005	CRUMB TRAY SGR 36" FRONT	1
40	-	Crumb tray handle	1
41	-	Crumb tray runner	2
42	911-70201106764L	Oven rack	2 per oven
42.1	CE2431	Grid rack	1
44	CE2432	Thermocouple	1 per oven
45	911-801021041009	Kick Plate Bracket	2 per oven
46	911-801021051008	Oil Collector	1
x47x	911-302150132-36-NAT	#36 NG Burner/Oven Orifice	1 per burner/oven
x48x	911-302150132-51-LPG	#51 LP Burner Orifice	1 per burner
x49x	911-302150132-50-LPG	#50 LP Oven Orifice	1 per oven